


IF IT IS FOUND DESIRABLE TO CHANGE ANY TOLERANCE OR OTHER DETAIL SPECIFIED ON THIS DRAWING NOTIFY THE PURCHASER PROMPTLY.		DIMENSIONS IN INCHES UNLESS OTHERWISE SPECIFIED					
MAXIMUM ALLOWABLE TOLERANCES HAVE BEEN DETERMINED AND DEVIATIONS WILL BE CAUSE FOR REJECTION. REMOVE ALL BURRS AND SHARP EDGES.							
ISSUE	ITEM	CHANGED FROM	DATE	CN. NO.	DRAFTS	CHECKER	ENG. APP.
X		ENG RELEASE	29 JAN 73		CC		

REQ.	ITEM	PART NO.	DESCRIPTION	SYMBOL
------	------	----------	-------------	--------

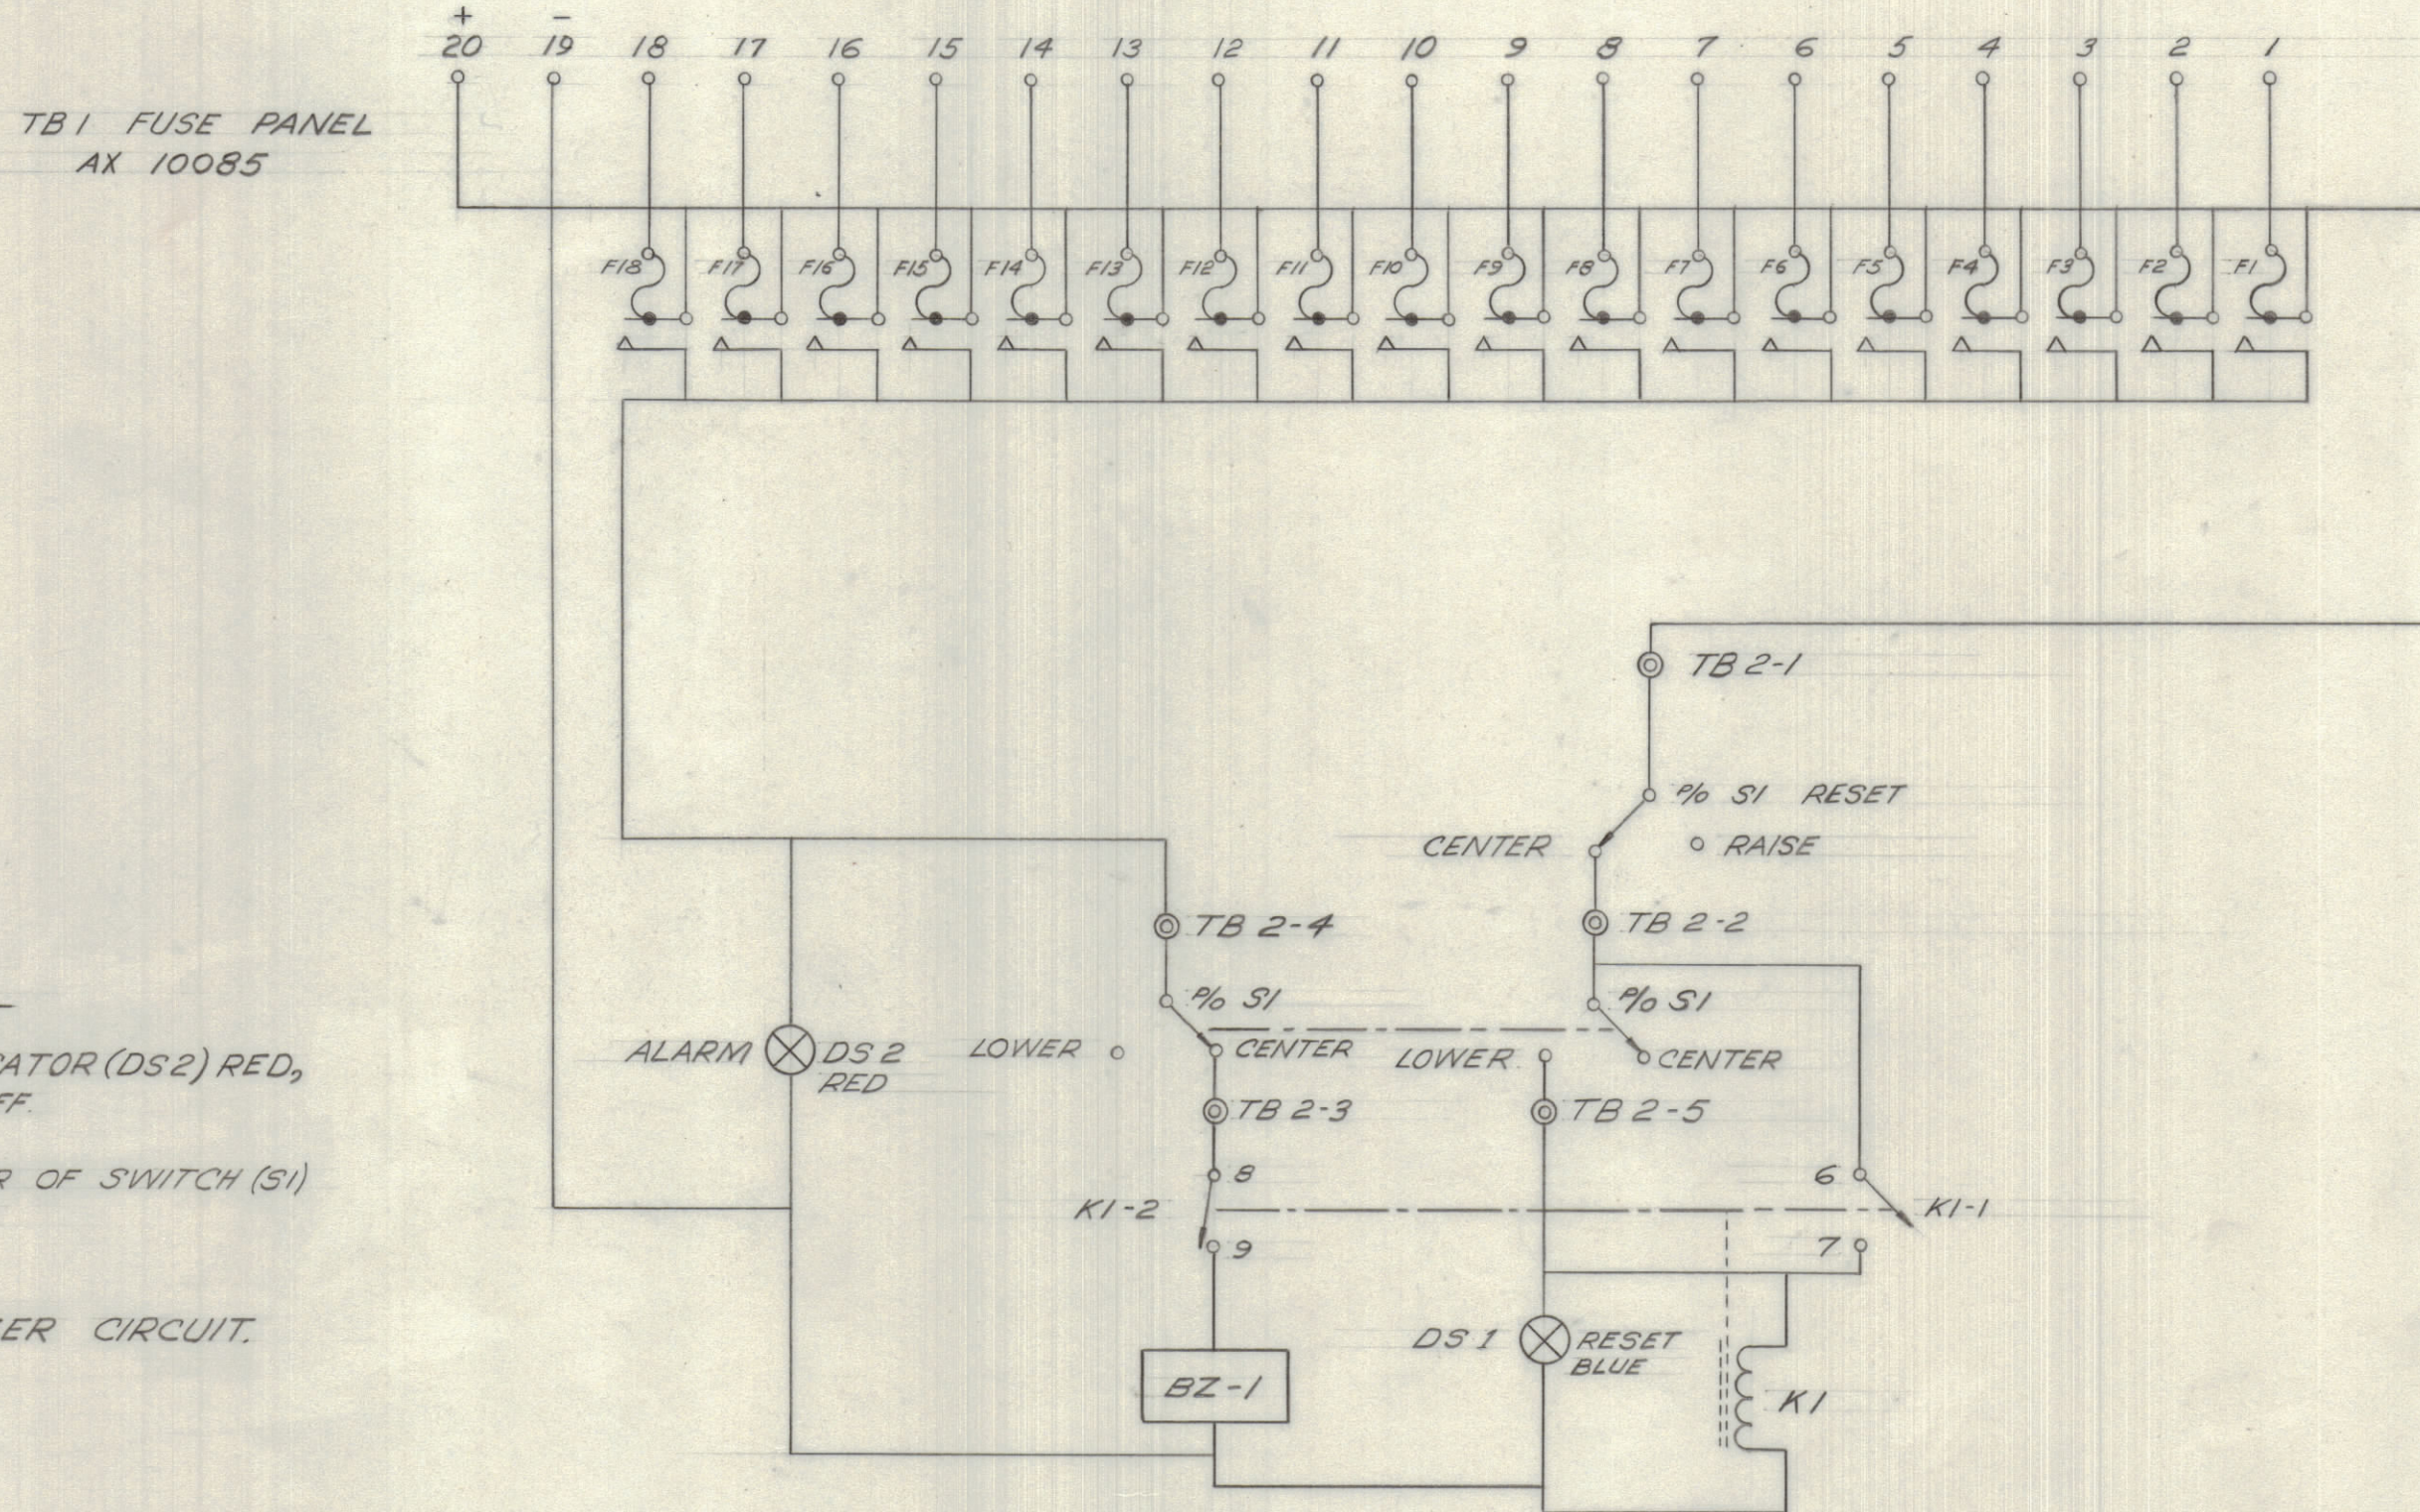

FUNCTION OF ALARM SYSTEMS.

- 1- WHEN THE FUSE BLOWS: ALARM INDICATOR (DS2) RED, LIGHTS AND BUZZER (BZ-1) SOUNDS OFF.
- 2- TO CANCEL THE BUZZER: PRESS LEVER OF SWITCH (S1) FROM CENTER TO DOWN POSITION. RELAY (K1) WILL ENERGIZE. LIGHT (DS1) BLUE, WILL LIGHT UP. ENERGIZED RELAY WILL OPEN BUZZER CIRCUIT. LIGHT (DS2) RED, WILL STAY ON.
- 3- REMOVE FAULTY FUSE: LIGHT (DS2) WILL TURN OFF
- 4- REPLACE FUSE.
- 5- RAISE LEVER OF SWITCH TO RESET POSITION: LIGHT (DS1) WILL TURN OFF. RELAY (K1) WILL DE-ENERGIZE AND, IN DOING SO, SHALL CLOSE THE BUZZER CIRCUIT.
- 6- RETURN LEVER OF SWITCH TO CENTER POSITION

CK10868 X

NOTE:  
1- K1 SHOWN DE-ENERGIZED (ALARM POSITION)

TOLERANCES		SCALE:
ALL	DEC. DIM. ± .05	DRILL, PUNCH, COMMERCIAL STOCK
OTHERS	FRAC. DIM. ± 1/64 .XX=.01	SIZES AND MANUFACTURERS
	ANGULAR DIM. ± 0° 30'	TOLERANCES ARE NOT INCLUDED.

ACG 10002	C-11366	29 JAN 73
MODEL	PROJECT NO.	DATE

STOCK SIZE		TMC (Canada) LIMITED	
		OTTAWA ONTARIO	
MATERIAL		FUSE & ALARM PANEL WIRING	
WEIGHT PER PC.		'B' & 'C' CIRCUITS - ALDERGROVE	
TYPE & TEMPER		C. CHARLES	
		DRAWN	ELEC. DES. APP.
HEAT TREAT. SPEC.		CHECKED	FINAL APPROVAL
		CK10868 X	