		TN	C SPEC	IFICATI	ON		NO. S -	1086			
REV: Ø		•	•								
COMPILED:	FP	To	CHECKED:	19	APPD:	Millen	SHEET	1	OF	7	
TITLE:			•			Z32	YUB				
Typed by	mtp 3	125/66				1					

FINAL TEST PROCEDURE

DUAL DIVERSITY RECEIVER

MODEL DDR-7K

					TM	1C	S	P	EC	IF	TC	'A'	TI	ON	1		 	_	 N	10. s	-	1086				
REV:	ø																$\prod$		T					T		
COMPIL	ED:	I	P	9	1	С	HEC	KED	:	·	I <del></del> -I	L		API	PD:	<u></u>	 	-4	 s	HEE	<u></u> -	2	OF	<del></del> ,	 7	
TITLE:		TEST	P	ROCI	EDUF	RE	FOR	МО	DEL	DD	R <b>-</b> 7	K							I						•	
Typed	bу	mtr	3	/25	/66								_						 							_

#### INTRODUCTION

The DDR-7K is a Diversity receiving system that combines the TMC Model double conversion receiver with the TMC Model SBC-1A sideband converter.

# TEST EQUIPMENT REQUIRED

- 1. Signal Generator: H.P. Model 606A
- 2. AC-VTVM: Ballantine Model 314
- 3. Frequency Counter: H.P. Model 524C
- 4. TMC Model TTG-2
- 5. Sonic Analyzer: Model LP-1A

#### PRELIMINARY

It is assumed that individual units have been tested and installed in the cabinet; that all cables have been connected and all inter-connections have been made.

- 1. Check for obvious mechanical and electrical defects.
- 2. Turn on main power on DCP-1; blowers should operate.
- 3. Measure line voltage at DCP-1 outputs.
- 4. Turn on all units.

#### PROCEDURE

# AFC-2A #1

- 1. Turn sensitivity control full CCW, RCC/OSC switch to OSC, AFC on SBS #1 to on.
- 2. Connect frequency counter to J5002, hold reset button depressed.
- 3. Frequency should read 250 KC +5 cps. Adjust tuning slug on 250 KC oscillator if required.
- 4. Connect counter to J5003, hold reset button depressed and set KC tuning knob to 0.
- 5. Frequency should read 705 KC ±250 cps. Adjust tuning slug on 705 KC oscillator if required. Remove counter.
- 6. With reset button depressed, set drift meter to center scale using adjustment pot on top of AFC chassis.

				T	M(		SP	EC	CIF	710	ZA	TI	10	1				NO	. s	_	1086	<del></del>		
REV:	Ø																	TT	T			T	T	1
COMPIL	LED:	:	FP	9		CHEC	KE	):				-	AP	PD:	 	 <del></del>		SH	EET		3	OF	<u></u>	
TITLE	:	TES	T P	ROCEI	URI	E FO	R M	ODE	L D	DR-	-7K				 									
Type	d b	v mt	т 3	1/28/6	 66											 	-							

### PROCEDURE - Cont'd

### SBS-I-1A #1

- 1. Connect signal generator to J6800. Frequency to 455 KC with 10 milli-volts output (no modulation).
- 2. Connect AC VTVM and 50 ohm load to J6806.
- 3. Set AFC switch to off, detection switches to SSB.
- 4. Set both channel IF selectors to 7.5 KC LSB.
- 5. Vary generator approximately 1 KC above 455 KC.
- 6. Adjust R116 on 7.5 KC LSB IF strip for 1 V on AC VTVM.
- 7. Set both IF selectors to 3.5 KC LSB.
- 8. Adjust R116 on 3.5 KC LSB strip for 1 V on AC VTVM.
- 9. Set both IF selectors to 3.5 USB. Vary generator approximately 1 KC below 455 KC.
- 10. Adjust R116 on 3.5 KC USB IF strip for 1 V on AC VTVM.
- 11. Set both IF selectors to 7.5 KC USB.
- 12. Adjust R116 on 7.5 KC USB IF strip for 1 V on AC VTVM.
- 13. Remove generator, AC VTVM, and load.

# SBC-I-1A-SYSTEM #1

- 1. Connect signal generator through a 20 DB pad to antenna input HFD-1, frequency set at 5 MC unmodulated with output set at 100 microvolts.
- 2. Set up FFR-3 for 5 MC reception.
- 3. Set AGC selector on SBS to channel A-B position, IF selector to 3.5 KC LSB.
- 4. Adjust CH-A and CH-B line level meters on SBS for O VU.
- 5. Connect DC VTVM between terminals 10 and ground of E6800 on back of SBS. Decrease generator to 10 microvolts.
- 6. Adjust R6800 on back of SBS for 0 volts on DC VTVM. Remove VTVM.
- 7. Turn sensitivity control on AFC-2A #1 fully CW, AFC on SBS #1 to on.
- 8. Holding reset button depressed, carefully tune generator so that the fade alarm goes out, level meter reads in the green, and the drift meter reads center scale.
- 9. To obtain a level meter reading in the green, it may be necessary to adjust the threshold pot on the top chassis of the AFC-2A.
- 10. Release reset button and turn sensitivity full CCW. After 1 minute, turn sensitivity back to CW. The level meter should return to the green, and the fade alarm go out.
- 11. Vary generator as in Step 8.
- 12. Connect frequency counter to signal generator.
- 13. Slowly vary generator plus 1 KC. When this is obtained, the AFC-2A should not be in a fade, and the drift should indicate in the yellow. Repeat for a frequency of minus 1 KC; the same conditions should exist. Retune generator for maximum indication on SBS line level meters.

TM	C SPECIFICATI	ON	NO. S_1086
REV: Ø			
COMPILED: FP	CHECKED:	APPD:	SHEET 4 OF 7
TITLE: TEST PROCEDUR	E FOR MODEL DDR-7K		
Typed by mtp 3/25/6	6		

PROCEDURE - Cont'd

### PROCEDURE: RECEIVER #2:

- 1. Repeat all the previous steps on the units in Receiver #2.
- 2. Repeat using GPR-90 as substitute for one FFR-3.

#### PRECEDURE: OVERALL RECEIVER

#### A. SIGNAL + NOISE TO NOISE:

- 1. Connect signal generator to Antenna Input of HFD-1. Set generator to 5MC with a 1 microvolt output.
- 2. Tune FFR-3 for 5.0 MC reception.
- 3. On SBS-1 set detection switches to SSB, and IF selectors to 3.5KC position.
- 4. Connect AC-VTVM to audio output on E6800 on SBS #1, and terminate with 600 ohms.
- 5. Vary generator for peaks on CH-A VU meter, set line level for OVU.
- 6. Reduce generator output to 0, set line level of CH-A for ODB reference on AC-VTVM.
- 7. Increase generator for a 10DB rise on AC-VTVM. Generator output should be 1 microvolt or less.
- 8. Repeat 1 8 for Receiver #2.
- 9. Repeat 1 8 for Receiver #3 (GPR-90).

### B. IMAGE RATIO:

- 1. Connect signal generator to Antenna input of HFD-1.
- Set generator for 5MC with 1 microvolt output.
- 3. Tune FFR-3 to 5MC.
- 4. Set SBS #1 detection switches to SSB, and IF selectors to 7.5KC position.
- 5. Vary generator for maximum indication on CH-A and CH-B VU meters, set line levels for OVU.
- 6. Retune signal generator to 5.910MC.
- 7. Increase generator attenuator to obtain OVU on VU meters.
- Generator output should be approximately 10,000UV (Average 80DB).
- 9. Repeat 1-8 for Receiver #2.

# C. IF REJECTION:

- 1. Connect generator to Antenna Input of HFD-1.
- 2. Set generator for 5MC with 1 microvolt output.
- 3. Tune FFR #1 to 5MC.
- 4. Vary generator for maximum indication on VU meters, set line levels for OVU.

TMC FORM SPEC 1 2M 9-65-AINS

				TN	<u> MC</u>	: S	SPE	CIF	FIC	<b>`A</b> '	TIO	ON			_		I	10. s	-108	6			
REV:	ø																						
COMPIL	ED:	F	P :	PP	C	HEC	KED:			•	•	APF	PD:		<b></b>		s	HEE	T 5		OF	7	
TITLE:	Tl	EST	PROC	EDUR	E F	OR	MODEL	DDF	R-7K														
Ty	ype	d b	y mt <sub>I</sub>	3/2	5/6	6					-					-							

# PROCEDURE - Cont'd

- 5. Retune generator to 455KC.
- 6. Increase generator attenuator to obtain OVU on VU meters.
- 7. Generator output should be 10,000UV (80DB) or greater.
- 8. Repeat 1-8 for Receiver #2.

### D. DISTORTION PRODUCTS:

- 1. Connect the RF tones of a TMC Model TTG-2 to Antenna Input of HFD-1.
- 2. Tune FFR #1 to 5MC.
- Vary FFR #1 tuning for maximum indication on CH-A and CH-B VU meters, set line levels for OVU.
- 4. Connect Sonic Analyzer to terminals 2 and 4 of E6800 of SBS #1.
- 5. Set up analyzer for two tone presentation on CRT.
- 6. Measure intermodulation distortion, should be at least 39DB below two tone level (45DB below PEP).
- 7. Repeat 1-6 for Receiver #2.
- 8. Repeat 1-6 for Receiver #3 (GPR-90).

#### E. DYNAMIC AGC CHARACTERISTIC CHECK

- a. Set controls on FFR-3 #1 as follows:
  - 1. AVC to ON position
  - 2. Tune to 5.0 MC.
- b. Set IF BANDWIDTH selector on SBS-1 to 7.5 KC USB position.
- c. Set the RF head at 5.0 MCS. Lock the TUNING control.
- d. Place the DETECTION switches on SBS-1 to SSB.
- e. Connect a signal generator via a 20 db pad to Antenna Input of HFD-1. Set the frequency to approximately 5.0015 mcs. UNMODULATED, and the output to 1.0uv. A 1.5 KC tone should be heard.
- NOTE: Because of the 20 db pad, the actual input to J109 on the FFR-3 is 10 uv; that is, actual input =sig. gen. output # 10. Connect Ballantine Meter to Audio output terminals of SBS #1 terminated in 600 ohms.
- f. Increase the signal generator output to 100.000 uv. Note Ballantine reading. Decrease signal generator output to 10 uv. Ballantine reading should not change more than 12 db.
- g. Repeat for Receiver #2.
- h. Repeat for Receiver #3 (GPR-90).

				Ŧ	M	C	S	P	Ξ(	CI	FI	C	Ā.	TIC	OI	N				 	•	NO	. s	-1	086			
REV:	ø																											
COMPI	LED:	FP	)	ST	'	СН	EC	KED	:						AF	PPD	:					SH	EE	Т	6		OF	7
TITLE	: 7	rest	PF	ROCEDU	JRE	FO	R	MOD	EL	, D	DR-	7K.													·			
		Гуре	ed l	y mtr	_3	/25	/6	6																				
				•																								
	SER	TAL	NO.																									
	MFG	, NC	•	<del></del>					_																			
				anical ng che			k																					OK OK
		Li	ine	Volta	ige	at		CP	ου	ıt l	ets																	VAC
		BI	Lowe	er Ope	era	tic	n														<del>,</del>					-		OK
	FFR.	-3											R	CVR	#]	<u>_</u>						RC	VR	#2	,			
	AFC.	-2A																										
1				tor Os														CP										CPS
	2.	Cor	ivei	rter (	)sc	ill	at	or				-		<del></del>				CP	S			,						CPS
	SBS	-I-J	LA																									
	1.	IF	Sti	rip Ou	ıtp	ut												ок					-					OK
	SBC	-I-J	LA																									
					. 1 3													OK										ок
	2.	AFC	Lo	nresho ocking								_						ок										OK
	3.	AFC	C Di	rift								_						OK										OK
	OVE	RALI	RI	ECEIVE	ER																							
	1.	Sig	gna.	1 + No	oìs	e t	0	Noi	ise	2	5 M	IC																
	2.	IMA	AGE	RATIO	)							_	_					ΟK										OK
	3.	IF	RE	JECTIO	N													ок										ок
	4.	DIS	STOI	RTION	PR	ODU	JCI	'S										DB										DB
												_			-			DB										DB
	5.			espons	se							_						מע										שש
			FR=: FC=:																					•				
			BS-I	I-lA																								
		וע	J.P 🖷 .	1.																 								
		D	ATE	:													T	EST	ER:	 								
																			•									
1																												

REVIS	HOI	SHEET	•	THE TECHNICAL MATERIEL CORP. MAMARONECK NEW YORK	S 1086	
DATE	REV.	SHEET	EMN #	DESCRIPTI	ON Sheet 7 Of 7	APP.
3/30/66	ø			ORIGINAL RELEASE FOR PRODU	CTION	Als
·						
<b></b>	<u> </u>		<u> </u>			