	TMC SPECIFICAT	TION	NO. S 1204
REV: Ø			
COMPILED:	NABALL CHECKED	APPD: OD	SHEET COVER OF 7
TITLE:		N,	
typed by	vita		

TEST PROCEDURE

FOR THE

STR-2Y

TM	C SPECIFICATION	NC	NO. S 1204
REV: Ø			
COMPILED: NAB	CHECKED:	APPD:	SHEET 2 OF 7
TITLE: TEST PROCEDUI	RE FOR THE STR-2Y		
typed by vita			

A. EQUIPMENT REQUIRED:

- 1. VOM, Simpson Model 260 or equivalent.
- 2. Audio Signal Generator, H/P Model 200 C/D or equivalent.
- 3. Loudspeaker, Four (4) ohm.
- 4. VTVM, H/P Model 410B or equivalent.
- 5. AC VTVM, Ballantine Model 314 or equivalent.
- 6. RF Signal Generator, H/P Model 606A or equivalent.
- 7. Frequency Counter, H/P Model 5244L or equivalent.
- 8. Step Attenuator, Telonic Model TG950 or equivalent.
- 9. Resistor, 600 ohm 1 watt.
- 10. Connector, BNC "T" (UG-274A-U).
- 11. Three 4' pieces RG58 cable, terminated with male BNC connectors.
- 12. Schematic Drawings CK1272.

B. PRELIMINARY:

- 1. All RF modules should be pre-tested per TMC S-808 before being installed into this unit.
- 2. Inspect the unit for mechanical inperfections such as loose screws, printed circcuit boards, cold solder joints, etc.
- 3. With the ohmmeter set for (+), check for 130 ohms +10% from Pin 11 on A3190 (Audio Board) to ground. With the ohmmeter set for (-), check for 200 ohms +10% from Pin 14 on A3190 (Audio Board) to ground.

C. POWER:

- 1. Connect the unit to an a-c outlet.
- 2. Set the power switch to ON. The white light should go ON.

ORM SPEC 1

	TM	No. s 1204						
REV: Ø								
COMPILED:	NAB	CHECKED:	APPD:		SHEET	3 OF 7		
TITLE:	TEST PROCEDU	RE FOR THE STR-2Y						
	typed by vit	· 						

C. POWER - Cont'd

- 3. With the H/P VTVM, measure +12V +5% from Pin 11 on the audio board to ground, from Pin 7 on the IF board to ground, and from Pin 1 on the RF module to ground. Also measure +12V +5% from Pin 14 on the audio board to ground, and from Pin 8 on the IF board to ground, and from Pin 8 on the RF module to ground.
- 4. Connect the a-c Ballantine between Pin 11 on the AF board and ground. The a-c noise measured should not exceed 1 mV.
- 5. Repeat Step 5 for Pin 14 on the audio board.
- 6. Make sure that the removal of the a-c line fuse, the B+ fuse and the B- fuse will make the respective voltages disappear.
- 7. Measure 115V a-c with the Simpson between Pin 10 and Pin 9 on the RF module.
- 8. Connect 600 resistor across terminals 3 and 5 on TB1501.
- 9. Connect the loudspeaker to terminals 9 and 10 on TB1501.


D. RECEIVER AUDIO CHECK:

- 1. Set the SQUELCH control R1547 on the rear apron to maximum clockwise.
- 2. Set the VOLUME control R1546 on the front panel maximum clockwise.
- 3. Set R1822 maximum clockwise.

	TN	IC SPECIFIC	ATION	No. s 120	4
REV:					
COMPILE	D: NAB	CHECKED:	APPD:	SHEET 4	OF 7
TITLE:	TEST PROCEDU	RE FOR THE STR-2Y			
	typed by vit	<u>a</u>			

D. RECEIVER AUDIO CHECK - Cont'd

4. Set the AUDIO SIGNAL GENERATOR at 1 KC and connect to the RECEIVER IF board as shown below with the generator output at zero, and A-C VTVM across input to board.

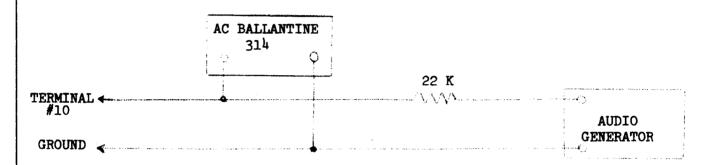

- 5. Increase the AUDIO GENERATOR output until a 1 KC tone is heard through the speaker. Insert the phones into J1516. The 1 KC tone should disappear from the speaker and should be heard on the phones. Remove the phones.
- 6. Rotate the SQUELCH control maximum counter-clockwise. The tone should abruptly disappear.
- 7. Set the AUDIO GENERATOR output for a 10 mV reading on the Ballantine AAC VIVM. Remove meter.
- 8. Connect the Ballantine across terminals 3 and 5 on TB1501. The meter should read approximately 780 mV.
- 9. Connect the Ballantine across terminals 3 and 4 on TB1501. The meter should read exactly half the voltage obtained in Step 8.

 Remove the meter.
- 10. Connect the Ballantine across R1660 on the RCVR AF printed circuit board. The meter should read approximately 1.4 volts.

 Leave meter connected.

	TM	C SPECIFI	CATIO	ON	 NO. S 1	204
REV: Ø						
COMPILED:	NAB	CHECKED:		APPD:	SHEET 5	OF 7
TITLE:	TEST PROCEDU	RE FOR THE STR-2	2 Y		 	
	typed by vit	a			 	

11. Rotate the VOLUME control counter-clockwise. The voltage across R1660 should drop proportionately with rotation of the VOLUME control knob. Reset the VOLUME control maximum clockwise, and remove the Ballantine A-C VTVM.

E. RECEIVER IF ALIGNMENT

- Set the RCVR sideband switch to LSB and turn R1554 and R1555 fully clockwise.
- 2. Connect the counter to emitter lead of Q1802 and adjust C1832 for a frequency of 1.5Mcs. ±2 cps as registered on the counter.

 Leave counter connected.
- 3. Set the RCVR sideband switch to USB/REMOTE.
- 4. Adjust C1834 for a frequency of 2.0 mc3+2 cps as registered on the counter. Remove the counter.
- 5. Set the RCVR sideband switch to LSB and remove the 1.5 mc crystal Y1801.
- 6. Connect the Ballantine between the base of Q1802 and GND.
- 7. Connect the HP 606A RF GENERATOR between terminals 1 and 2 on the RCVR IF Board with the generator's output control at zero.
- 8. Set the generator frequency at 1.75 mc ±50 cps using the frequency counter, and increase the generator output to approximately 1.0 mV. The Ballantine should indicate some voltage present at the base of Q1802.
- 9. Adjust C1804 and C1802 for a peak indication on the Ballantine Meter. Peak reading should be 10 mV minimum.
- 10. Reduce generator output to zero and remove m ter.

				T	MC	: 5	PE	EC	IF	TC/	AT	10	N		 	 NO. S	: 1	204		,	
REV:	Ø																				
COMPIL	ED:	1	IAB		(HEC	KED	:				A	PPD:			 SHEE	т	6_	OF	Z	
TITLE:		TES	ST P	ROCED	URE	FO	R TH	E S	TR-	-2 Y				 	 	 					
		tyj	ped 1	by v i	ta									 		 					

- 11. Remove signal generator.
- 12. Replace crystal Y1801.
- 13. Connect AC VTVM across terminals 3 and 5 on TB1501.
- 14. Set volume control (R1546) maximum counter clockwise and SQUELCH control R1547 to mid-position.
- 15. Turn power switch OFF, insert TTRR-module and turn power switch ON. Allow 10 minutes warm up time.
- 16. Connect RF signal generator through a step attenuator to antenna input jack (J1502).
- 17. Set RF signal generator to 100 mV at appropriate frequency 30% modulated at 1 kHz.
- 18. Insert 80 db of attenuation in step attenuator. Retune C1802 and C1804 for peak.
- 19. Remove signal source.
- 20. Monitor terminal 9 on A4020 with a d-c VTVM. Adjust R1834 for an indication of +1.4V dec.
- 21. Insert signal source with 40 db of attenuation. While observing the a-c VTVM carefully adjust R1841 until the meter peaks, then continue adjustment until the meter reduces by .5V from peak.
- 22. Adjust RF signal generator for 30 mV output, step attenuator for 86 db of attenuation, adjust R1557 until K1601 just de-energizes.
- 23. Remove 6 db of attenuation, adjust R1547 until K1601 just energizes.

1M -8-64-AINS

C FORM SPEC 1

			TN	IC S	SPE	CIF	ICA	MOIT	1		 NO. S 12	204	╝
REV:	Ø											5	
COMPIL	ED:	NAB		CHE	KED:			AF	PD:		SHEET	0F 7	_
TITLE:		TEST P	ROCEDI	JRE FO	OR THE	STR	-2Y			 	 ,		_
		typed	by vii	ta						 			_

- 24. Repeat Steps 21 and 22 until K1601 energizes with -80 db, and de-energizes with -86 db. (All in reference to 30 mV source).
- 25. Set RF signal generator for 100 mV output. Set 90 db of attenuation into step attenuator.
- 26 Observe a-c VTVM. Insure that at least .78 volts is indicated.

 Reduce output. Adjust R1822 for a 10 db reading on the 1V scale.
- 27. Remove the 90 db of attenuation. Insure that output does not rise more than 8 db.
- 28. Repeat Steps 21, 22 and 23 using 70 db and 76 db vice 80 db and 86 db.

REVIS	HOI	SHEET		THE TECHNICAL N	NEW YORK	S 1204	
DATE	REV.	SHEET	EMN #		DESCRIPTIO		APP.
/31/67	Ø			OIRGINAL RELEA	SE FOR PRODUCTI		
<u>/31/0 (</u>	<u></u>			<u> </u>			
				,			
	ļ <u>-</u>						
			<u> </u>				
	<u> </u>						
	<u> </u>		<u> </u>				
	1						
							,
			ļ				
	<u> </u>						
	ļ		ļ				
-	-		 				
	 		-				
	-		-				
	 		-				
	_						
-	-	_	+				
	+		+				
	-		+				
	+		1				
	-						