DATE July 3	. 1963 or_7	TMC SPECIFICATION NO. S -767							
I.J.	CHECKED	TITLE:							
YF4	7.3.63								

TEST PROCEDURE, SBT-350 H & Q

TMC SPECIFICATION NO. S -767

I.J. OF 7

COMPILED CHECKED

TITLE: TEST PROCEDURE, SBT-350 H & Q

THE 7.3.63

NOTE: THIS SPEC IS APPLICABLE TO THE SBT-350 H & Q, THE ONLY DIFFERENCE BEING THAT THE SBT-350Q USES THE SBE-2 AND THE SBT-350H USES THE SBE-3.

A. INTRODUCTION

APPROVED

The SBT-350 H or Q is a general purpose radio transmitter system providing SSB, ISB, DSB, AM, FSK, FAX, AND CW operation throughout a frequency range of 2 to 32 MC. The rated power output of this unit is 350 WATTS PEP and 200 WATTS CW.

B. MAIN COMPONENTS

The SBT-350 H or Q consists of separate units integrated to form the transmitter system. These components are:

- 1. Rack assembly RAK-19C.
- 2. Auxiliary power panel APP-5.
- 3. Power supply PSP-350.
- 4. Linear RF amplifier RFA-1.
- 5. Mode selector SBE. .
- 6. Variable frequency oscillator VOX.
- 7. Standing wave ratio indicator SWR-1K.
- 8. Tone intelligence unit TIS-3.

C. TEST PROCEDURE

The test procedure for the SBT-350 system is outlined on the following pages. Before the system can be tested correctly, all components except the RAK-19C rack assembly must be tested and passed by the test department as per the specific requirements for each unit.

TMC SPECIFICATION NO. S -767

I.J. OF 7

TITLE: TEST PROCEDURE, SBT-350 H & Q

TH 7.3.63

APPROVED

I. EQUIPMENT REQUIRED

- 1. 52 ohm dummy load, 500 W dissipation.
- 2. AC power cable.
- 3. Test equipment rack TMC model PTE.
- 4. RF output cable, RG-8/U.
- 5. MWC24(7)\$3, cable insulated shielded, 5 ft.
- 6. CA-409 cable assembly, jumper 6 in.
- 7. H.P. VTVM, Model 410B, or equivalent.
- 8. Test Chart, SBT-350 H or Q.
- 9. Test cable assembly #106.
- 10. Voltmeter, Simpson 260 or equivalent. (VOM)
- 11. Square wave generator, Boonton Model 71.
- 12. Test receiver (GPR 90 or equivalent).

II. PROCEDURE

- 1. Install AC input power cable from J701 of RAK-19 to AC line.
- 2. Connect fanning strips of test cable assembly to E502 on rear of APP-5 chassis.
- 3. Connect shielded lead from output of TTG mounted in test equipment rack PTE to CHANNEL 1 and CHANNEL 2 input terminals on test cable assembly.
- 4. Connect dummy load MONITOR OUTPUT to SIGNAL INPUT jack of PTE analyzer.
- 5. Connect cable from OUTPUT jack of SWR to dummy load input. Connect H.P. VTVM across dummy load.
 - 6. Connect jumper from terminal 5 on test cable terminal board T601 to terminal 8. This completes external interlock circuits.
 - 7. Connect a jumper from terminal 21, T602 to terminal 22. This completes the KEY LINE circuit to the SBE.
 - 8. Set MAIN POWER switch on APP-5 to ON position. The red MAIN POWER indicator lamp should light, and rack blowers should start running.

DATE July SHEET 4	3. 1963 or7	TMC SPECIFICATION NO. S -767									
I.J.	CHECKED	TITLE: TEST PROCEDURE, SBT-350 H & Q									
HF H	7.3.63										
APPR	OVED										

- 9. Set MAIN LINE switch on PSP-350 to ON position. The MAIN POWER indicator lamp should light and RFA-1 blower should start running. NOTE: PSP-350 TRANSMITTER PLATES switch should be in STANDBY-REMOTE position; HV LINE switch in OFF position.
- 10. Turn on POWER switch on SBE. The red lamp on power supply and OVEN lamp should light.
- 11. Turn on POWER switch on VOX. The red MAIN POWER lamp and INNER OVEN and OUTER OVEN lamps should light.
- 12. After a warm-up time of approximately 5 minutes, set the TRANSMITTER PLATES switch to ON position. The indicator lamp should light. The HV LINE OVERLOAD indicator should also light. Set TRANSMITTER PLATES switch to STANDBY-REMOTE position.
- 13. Set XMTR switch on SBE to ON position. The TRANSMITTER PLATES & HV LINE OVERLOAD indicator lamps on PSP-350 should light.
- 14. Turn VOX METER switch to HFO position.
- 15. Set VOX HFO switch to ON position.
- 16. Set VOX MASTER OSCILLATOR FREQUENCY as required.
- 17. With the SBE MF XTAL SW in the VMO position, adjust the SBE for two tone test at required output frequency using the TTG supplied with the PTE TEST equipment rack.
- 18. Set the SBE OUTPUT control to zero.
- 19. Set HV LINE switch on PSP-350 to ON position. Red indicator should light and amber OVERLOAD indicator should go out.
- 20. Using the tuning chart, adjust the RFA-1 for 350 W. PEP at required frequency (132 VRMS across 52 ohm load).
- 21. Adjust RFA-1 to obtain 40db third order distortion at 350 W. PEP.
- 22. Adjust RFA-1 to obtain 200W CW. (100 VRMS across 52 ohm load)
- 23. Place VOM across terminals 3 and 4 of T601 on test cable. Meter should read 115 volts AC. This is transmitter antenna relay voltage, and may vary \$10%.
- 24. With voltmeter connected as in (23) above, set XMTR switch and EXCITER switch on SBE to OFF position.
 - a. Voltmeter should read zero volts.
 - b. HV LINE and TRANSMITTER PLATES indicators on PSP-350 should go out.

DATE July SHEET 5	3, 1963 or ⁷	TMC SPECIFICATION NO. S -767
I.J. Compiled	CHECKED	TITLE: TEST PROCEDURE, SBT-350 H & Q
TF H	7.3.63	
APPR	OVED	

- 25. Place jumper across terminals 1 and 2 on T601. TRANSMITTER PLATES and HV LINE imdicators should light. Remove jumper.
- 26. Place a jumper across terminals 9 and 10 on T601. TRANSMITTER VOLTAGES, FINAL VOLTAGES, and EXCITER ON indicators should light. Remove jumper.
- 27. Place an ohmmeter across terminals 24 and 25 on T602. The ohmmeter should read 10 ohm ±20% between 24 and 25, between 23 and 24.

Place a jumper across terminals 9 and 10 to key the unit. An ohmmeter connected between 23 and 24 should read 10 ohms ±20%, between 24 and 25 should read.

- 28. Turn the LEVEL ADJ. knob on the TIS-3 maximum clockwise.
- 29. Set the SHIFT CPS indicator to 850.
- 30. Turn the FUNCTION selector switch to the CW position.
- 31. Turn the CENTER FREQUENCY CPS selector switch to the 2000 position.
- 32. Turn the TEST selector switch to the LINE position.
- 33. Turn the KEY MODE selector switch to the 50V position.
- 34. Set the MULTIPLY by frequency selector on the SQUARE WAVE GENERATOR to 1 position.
- 35. Turn the CYCLES frequency selector maximum counter-clockwise and observe fluctuating meter reading.
- .36. Turn the control knob under the PEAK VOLTS meter maximum counter-clockwise.
- 37. Set the small OUTPUT selector switch to the 50 position.
- 38. Connect a piece of 2 conductor shielded cable from the two uppermost S.W. output terminals on the SQUARE WAVE GENERATOR to the test cable assembly terminal board T602 so that the upper S.W. output terminal is connected to terminal 27 on T602 and the other S.W. output terminal connected to terminal 29 on T602.
- 39. Set the B+ switch on TIS-3 to ON position. The red B+ indicator should light.
- 40. Set the EXCITER switches, CHANNEL 1 and CHANNEL 2, to FSK FAX CW position.
- 41. Increase the LEVEL ADJ. knob for a fluctuating meter indication approximately 1/3 full scale reading.

TITLE: TEST PROCEDURE, SBT-350 H & Q

TITLE: TEST PROCEDURE, SBT-350 H & Q

THE TEST PROCEDURE SBT-350 H & Q

THE TEST PROCEDURE SBT-350 H & Q

- 42. Adjust the LSB section of the SBE for an indication of a fluctuating input on both CHANNEL 1 and CHANNEL 2. Turn LSB section OFF.
- 43. Adjust the USB section of the SBE for an indication of a fluctuating input on both CHANNEL 1 and CHANNEL 2. Adjust USB GAIN control for approximately 1/3 scale deflection.
- 44. Set up test receiver to receive test frequency BFO on.
- 45. Adjust SBT-350 system for approximately 200 WATTS CW at test frequency using USB, CHANNEL 1 or CHANNEL 2.
- 46. A keyed 1 KC tone should be heard on the receiver.
- 47. Reduce transmitter output to zero.
- 48. Turn FUNCTION selector switch on TIS-3 to the FSK position.
- 49. Increase transmitter output to 200 watts. A varying tone above and below the center frequency should heard.
- 50. Vary the CENTER FREQ. CPS selector between 2550 and 1900 and listen for changes in pitch of varying tone. Set switch back to 2000.
- 51. Vary the SHIFT CPS indicator to a lower value and note a narrower shift above and below the center frequency.
- 52. Reduce transmitter output to zero.
- 53. Change the small OUTPUT selector on the SQUARE WAVE GENERATOR to the 10 position.
- 54. Disconnect the wires from terminals 27 and 29 of test cable assembly and connect to terminals 31 and 32. This connects the generator to the FAX input.
- 55. Set the FUNCTION selector switch on the TIS-3 to the FAX position.
- 56. Increase transmitter output to 200 watts. A varying tone should be heard.
- 57. Reverse the output leads at the SQUARE WAVE GENERATOR and note a change in frequency of output tone of receiver.
- 58. Reduce transmitter out put to zero.
- 59. Turn off all power switches and reduce all gain controls to zero. Remove AC connections to line.
- 60. Check cables, hardware and slides for ease of movement. Units should tilt without obstruction.
- 61. This completes testing of syst m SBT-350 H or Q.

																					t
	THE CONTENTS OF THIS DRAWING ARE THE EXCLUSIVE PROPERTY OF THE TECHNICAL MATERIEL CORP. ITS UNAUTHORIZED USE OR REPRODUCTION IN WHOLE OR IN PART IS STRICTLY FORBIDDEN.																				
7								SBT- 35 0	H or	Ser. 1	No	***************************************	RFA	Ser.	No		SBE	E-3	Ser. N	·	
Q.	DAT TES	E						SBT -350	8 r. 1	3 r. No		TIS	Ser.	No		PSP-350 Ser. No.			o		
7 7		_						SWR-1K	- 4	Ser. 1	No		SBE-2	Ser.	No.		APT	-5	Ser. N	·	
S-767 SHEET										8 2.4			VOX-5	Ser.	No						
0.0	in in	350 WATTS PEP, SSB											•	9) 200 W							
FREQ MC	VOX SETTING			lat AMPL.		PA	PA	PA	MA, 3	PA M/	A, PA	3rd ORDER	MA, PA	MA, PA	TORWAR	D REFLECT			ARKS	がない はいま かいかい かん かん かん かんかい かいかい かいかい かいかい かいか	·····································
	DEIIIMO	DARU	DARD	TUE	TUNE	MUNITE	1/0 AD 12	SWITCH	CURR	ENT C	ARENT	D. DESPUENTE ON -DB	PLATE CURRENT		POWER WATTS				and the second section of the sectio	and the bright of parameters of a first out of \$100 cm . And the high regions	antigligg de de fact o mar i man
2																					
5												Material (Linguage and August of Section 1985)									
10																					
15	i																				
20																					
30																					namunannaman, e n er en
	NOTE: 1	. 350	W, PEP	, IS 132 V	RMS ACRO	SS 52 ol	m LOAD.	,				•			entillem superconnective de autorites and accompany of the	and an arrangement of the second		inas cause de la internación de la companya de la c	anderer y makinggi fra derfraktyriken er Ser Gefan 120e kan het folgened (inde controlled dissipation (1887 A CONTINUE - VA SURVA A PARAMETER)
	. 	. 200	DW CW, 1	18 100 VRM	B ∵ACRUSS	DE ORM					#		SEPT RE.	ACT				•			•
									POWE	R TO P	PSP-35()									
-						e List Victoria		3. A.C. 4. A.C.	POWE	R TO S	BE-										
								5. A.C. 6. INTE		R TO T											
								7. KEY	LINE (CIRCUI	T	*************									
								9. CHANNEL & CIRCUIT 10. REMOTE XMTR PLATE CIRCUIT												,	
								11. 115V			1111 (1)										
																					,
İ																					
										REQ. ITE	REQ. ITEM PART NO. DESCRIPTION						SYMB L				
																THE TECHNICAL MATERIEL CORP.					
									STOCK SIZE					S-767 SHEET 7 OF 7							
SYM		DFecs	IPTION	DA	TE CH NO	PRAFTS CHECK	ENG								MATERIAL					SBT-350	H & O
	UNLESS (E SPECIFIED		LE:	ARTIS CHECK	ERW. APP.	I	-	<u> </u>	 		T				188	· · · · · · · · · · · · · · · · · · ·	*	7	F4 7.3.63
	SIONS ARE IN	INCHES			XIMUM ALLOWA			REQ.	MODEL		SECTION	A Serv Via		TYPE & T	EMPER HEA	T TREAT. SPEC.	DRAWN	CHECKED		FINAL APPRO	
•	IONS ± 1/64	DECIMALS	1.005 AN	### # 1/00 h	L BE CAUSE FO MOVE ALL BUR			PER UNIT			USED	ASS'Y. NO.	DATE	F	INISH & SPEC	. NO. E	LEC. SES. APP.	MECH. DES. AF	S -	767	