



## FOREWORD

This Technical Manual for the GPT-10KYB transmitter is divided into two volumes that contain complete instructions for installation, operation and maintenance of the transmitter. Operating instructions and exciter component manuals are as listed within the context of Volume I. Main frame maintenance instructions and installation procedures are presented in the Volume II. Refer to Table I which lists the manuals in each Volume.

TABLE 1

Volume I	Volume II
Operating Instructions for GPT-10KYB	Installation Instructions for GPT-10KYB
General Purpose Exciter GPE-1A	Maintenance Instructions for GPT-10K
Standing Wave Control Unit SWCU-1	Solid State Power Supply HVRC-2